



Using supplied Laser module replace the output cable as shown.
 Tyco Electronics housing 1-794617-0 with Crimp 1-794610-1 (Amazon)
 1 - Fan+, 6 - Fan -, 2 - Laser +, 3 - Laser -, 8 - PWM (5V)
 Arduino 5V relay module. Laser + to the sense input.
 PWM to the TTL input of the Laser.